

Set up your personal configuration  **Universal menu book on-line**  
**OPTICONFIGURE** bar code configuration and commands application

---

**OPTICONFIGURE**



@MENU\_OPTO@ZZ@SU  
@ZZ@OTPO\_UNEM@

Description	Code
Defaults USB HID	SU

**OPTICONFIGURE**

Set up your personal configuration  **Universal menu book on-line**  
**OPTICONFIGURE** bar code configuration and commands application

**OPTICONFIGURE**



@MENU\_OPTO@ZZ@D3A  
 @YO@Y3@X2@AG@ZZ@OTPO\_UNEM@

Description	Code
Floodlight and aiming options Disable floodlight	D3A
Quiet zone options Margin check 1/7 nominal	YO
Read time options 3 seconds	Y3
Redundancy Read 3 times, redundancy = 2	X2
Multiple read reset time Indefinitely	AG

**OPTICONFIGURE**